



E-1

Cylinder,Cylinder Head

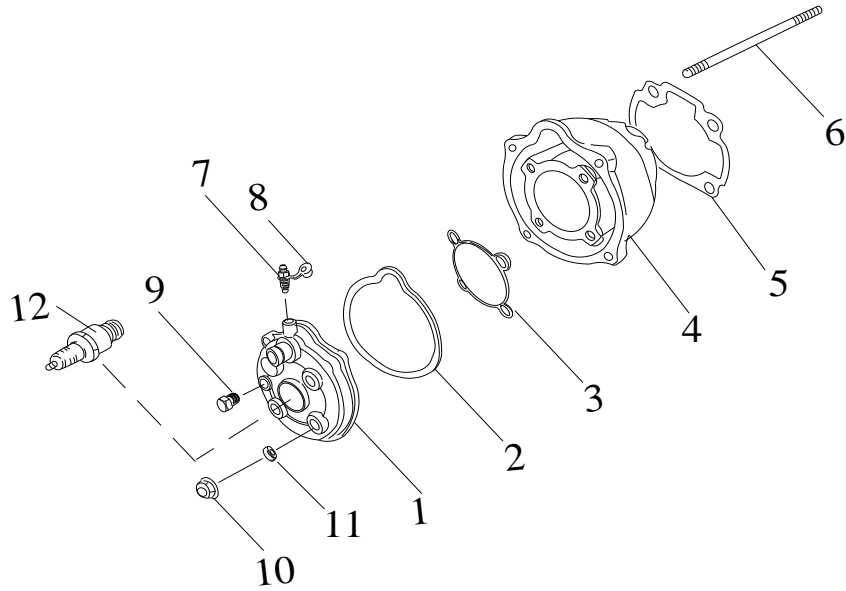

Item	Part No.	Part Name	Q'ty
1	12200-E03-100	Head, Cylinder	1
2	12310-E03-101	Ring, Oil	1
3	12300-E03-100	Ring, Oil	1
4	12100-E03-100	Cylinder	1
5	12191-E03-102	Gasket, Cylinder	1
6	P91000-07109	Bolt, Stud	4
7	15872-E01-000	Bolt,Leaking	1
8	15873-E01-000	Cap,Leaking	1
9	15240-E01-000	Sensor, Temperature	1
10	92207-E03-000	Nut, cap	4
11	P93102-07514-25	Washer, Plane (Copper)	4
12	98069-1BR8HSA-R	Plug, Spark	1


Piston, Crankshaft

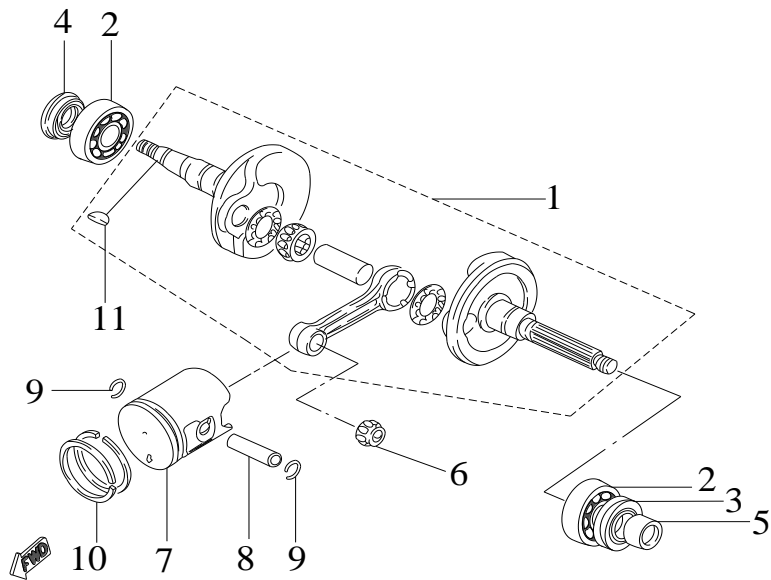

Item	Part No.	Part Name	Q'ty
1	13000-E03-000	Crankshaft Ass'y	1
2	95100-T6204C3	Ball Bearing, Crankshaft	2
3	96100-204208	Seal,Oil	1
4	96100-203006	Seal,Oil	1
5	13200-E03-000	Collar,L Crankcase	1
6	95200-KBK10	Bearing, Needle	1
7	13300-E06-000	Piston(std.)	1
8	13400-E03-100	Pin, Piston	1
9	13410-E03-100	Clip, Piston Pin	2
10	13310-E06-000	Rings,Piston(std.)	1
11	13010-E01-000	Key, Woodruff	1

E-3


Pump Ass'y, Liquid

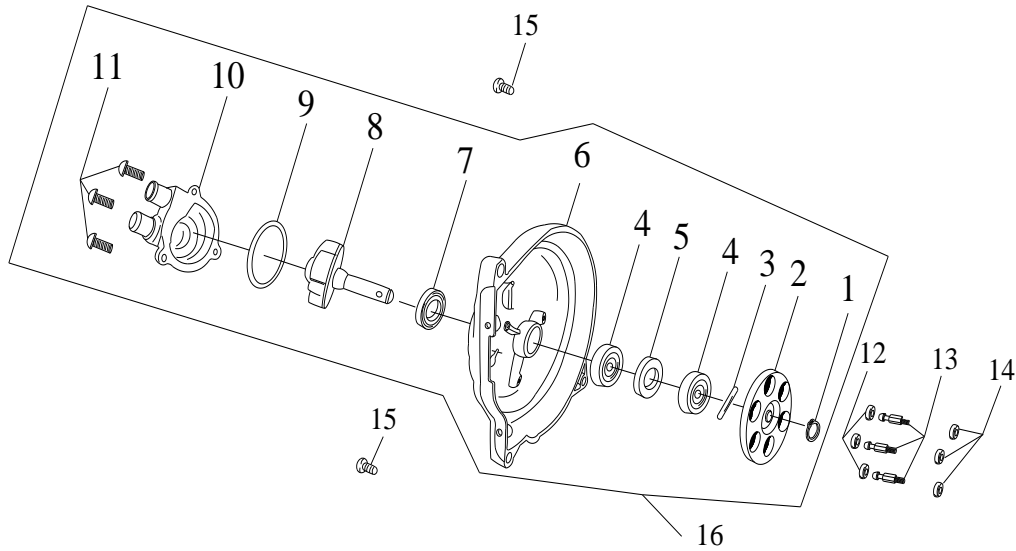

Item	Part No.	Part Name	Q'ty
1	93406-STW08A	CirClip	1
2	15211-E01-000	Pump Driver Wheel	1
3	94002-030198	Pin	1
4	95100-T608LLU	Ball, Bearing	2
5	15216-E01-000	collar	1
6	15212-E01-000	Body Pump	1
7	96100-101804	Seal, Oil	1
8	15213-E01-001	Rotor Ass'y , Pump	1
9	96200-525020	Oil-Ring	1
10	15215-E01-000	Cap,Pump	1
11	91740-05016W-1	Bolt, Pan, Crosshead	3
12	31130-E01-000	Plug, Rubber	3
13	15875-E01-000	Bolt, Driver	3
14	93100-06013-10W-2	Washer, Plain	3
15	91760-06020-05W-1	Hex. Socket Bolt	2
16	1520A-E01-000	Pump Ass'y, Liquid	1

E-4


Radiator

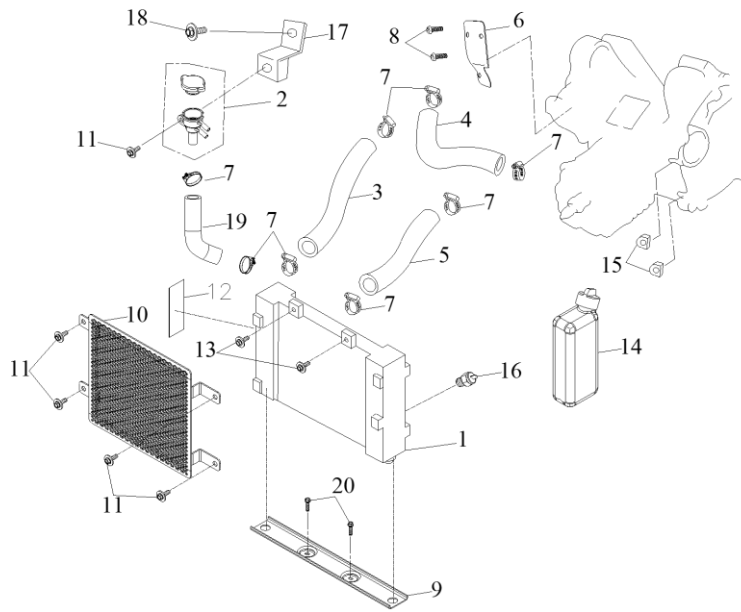

Item	Part No.	Part Name	Q'ty
1	15230-A03-010	Radiator Assembly	1
2	15229-A03-010	Pour Set	1
3	15233-A02-010	Hose A, Liquid	1
4	15233-162424	Hose B, Liquid	1
5	15233-A02-020	Hose C, Liquid	1
6	17211-E01-000	Cover, Dust-Proof	1
7	97411-230-12	Clip	8
8	91740-05010B-1	Bolt, Crosshead, Pan Phillips	2
9	71312-A03-000	Support, Radiator	1
10	15236-A03-000	Mesh, Radiator	1
11	91700-06016-10G	Hex. Bolt, Flange	5
12	72116-A01-001	Warning Decal, Radiator	1
13	91750-06020-10G-1	Hex. Bolt, Flange	2
14	15235-A01-040	Coolant(green)	1
15	17110-E01-000	Grommet	2
16	91836-A01-201		1
17	71280-A01-100		1
18	91700-08016-12B-1		1
19	15234-A02-000		1
20	91700-06012-10G	Hex. Bolt, Flange	2

E-5


Oil Pump

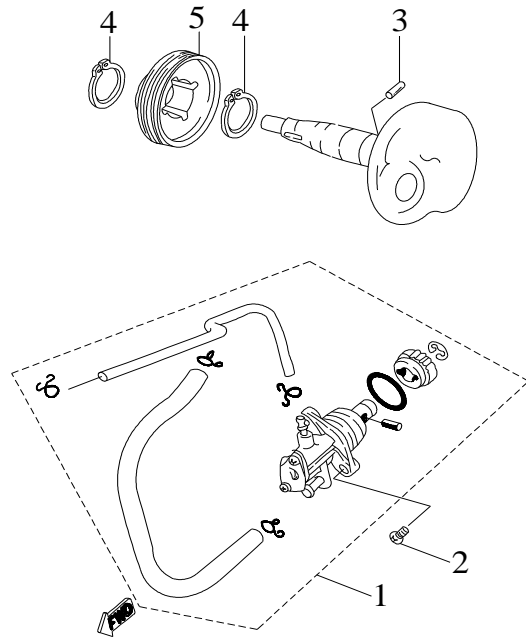

Item	Part No.	Part Name	Q'ty
1	15100-E03-000	Pump, Oil	1
2	91740-05016W-1	Bolt, Pan, Crosshead	2
3	94002-030118	Pin	1
4	93406-STW19A	Circlip	2
5	15110-E01-000	Drive,Gear, Oil-Pump	1

E-6


Air Cleaner, Reed Valve

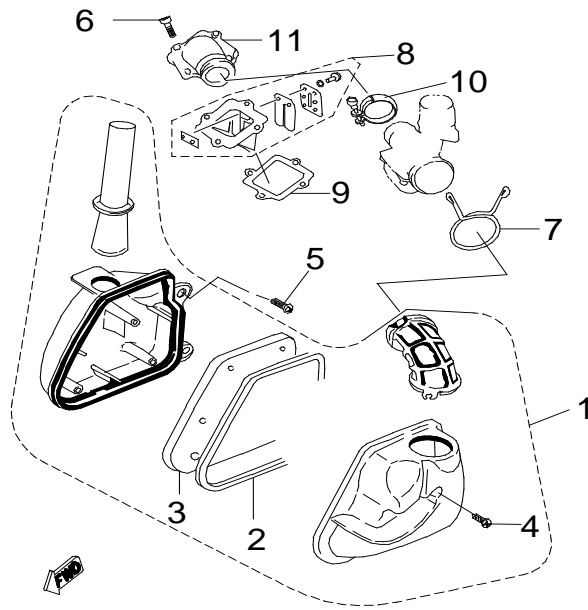

Item	Part No.	Part Name	Q'ty
1	17300-E03-100	Air Clenear Ass'y	1
2	17311-E01-000	Seal	1
3	17320-E01-000	Filter Element, Air Cleaner	1
4	17334-E01-000	Screw, Tapping	3
5	91760-06020-05W-1	Hex. Socket Bolt	2
6	91760-06020-05W-1	Hex. Socket Bolt	4
7	17333-E01-100	Clip	1
8	14710-E03-000	Reed Valve Ass'y	1
9	14711-E01-100	Gasket, Reed Valve	1
10	16422-E01-000	Band, Intake Manifold	1
11	16410-E01-000	Manifold, Intake	1

E-7


Carburetor

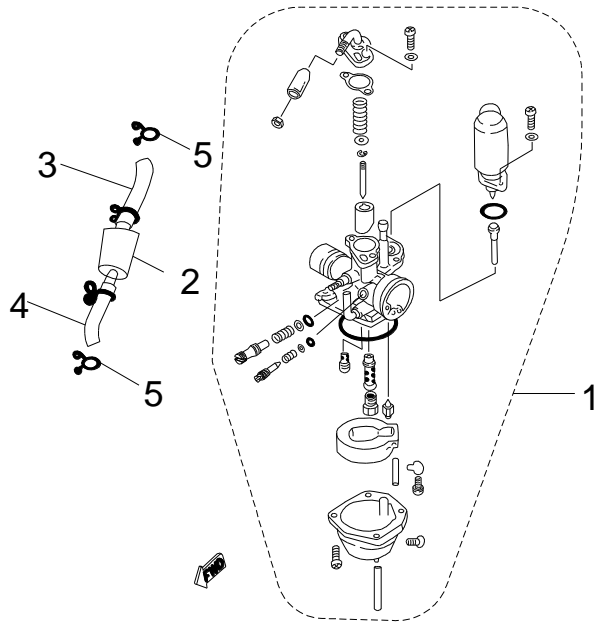

Item	Part No.	Part Name	Q'ty
1	16100-E03-010	Carburetor Ass'y	1
2	16300-E01-000	Filter, Fuel	1
3	16310-06135A	Tube A , Fuel	1
4	16310-06070	Tube , Fuel	1
5	97410-E01-000	Clip, Tube	4


E-8

Crankcase

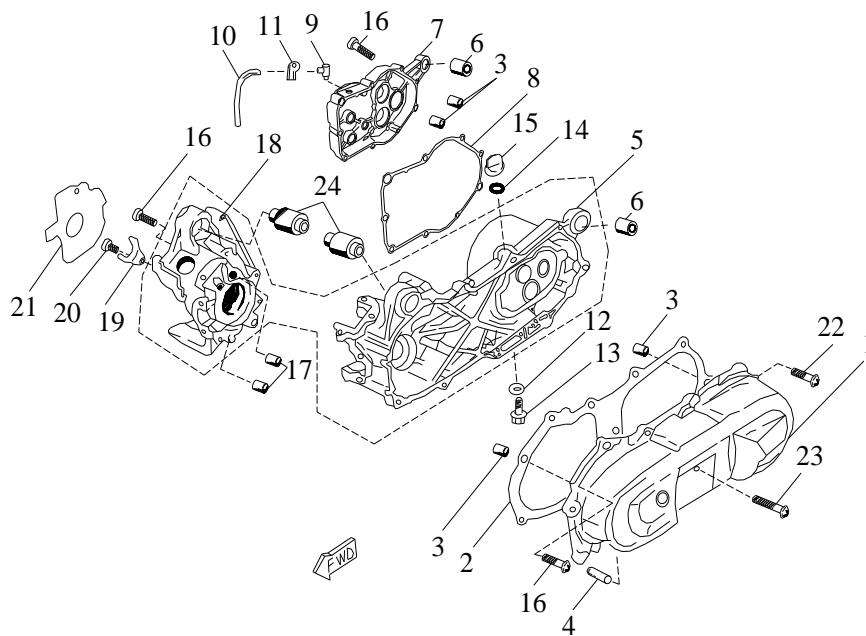


Item	Part No.	Part Name	Q'ty
1	11340-E03-100	Cover, L. Crankcase	1
2	11395-E01-101	Gasket, L. Crankcase	1
3	94001-100140	Pin, Dowel	4
4	11344-E01-000	Shaft	1
5	11200-E03-010	Crankcase, L.	1
6	93507-082021	Bush	2
7	11500-E01-000	Gasket ,Transmission Gear Case	1
8	11420-E01-101	Case Cover ,Reverse Gear	1
9	11210-E01-000	Breather	1
10	11211-E01-001	Hose,Breather	1
11	97410-E03-000	Clip,Fuel hose	1
12	93101-08015-15-1	Washer, Copper	1
13	91700-08012-12G	Hex Waser Face Bolt	1
14	96200-138024	O-Ring	1
15	11212-E01-000	Plug, Oil	1
16	91760-06035-05W-1	Hex. Socket Bolt	15
17	94001-120160	Pin, Dowel	2
18	11100-E03-010	Crankcase, R.	1
19	11110-E01-000	Holder	1
20	91760-06010-05W-1	Hex. Socket Bolt	1
21	31121-E01-100	Gasket, A.C.G	1
22	91760-06025-05W-1	Hex. Socket Bolt	8
23	91760-06065-05W-1	Hex. Socket Bolt	1
24	93506-123538	Bush	2
25	91760-06040-05W-1	Hex. Socket Bolt	2

**E-9
Starter**

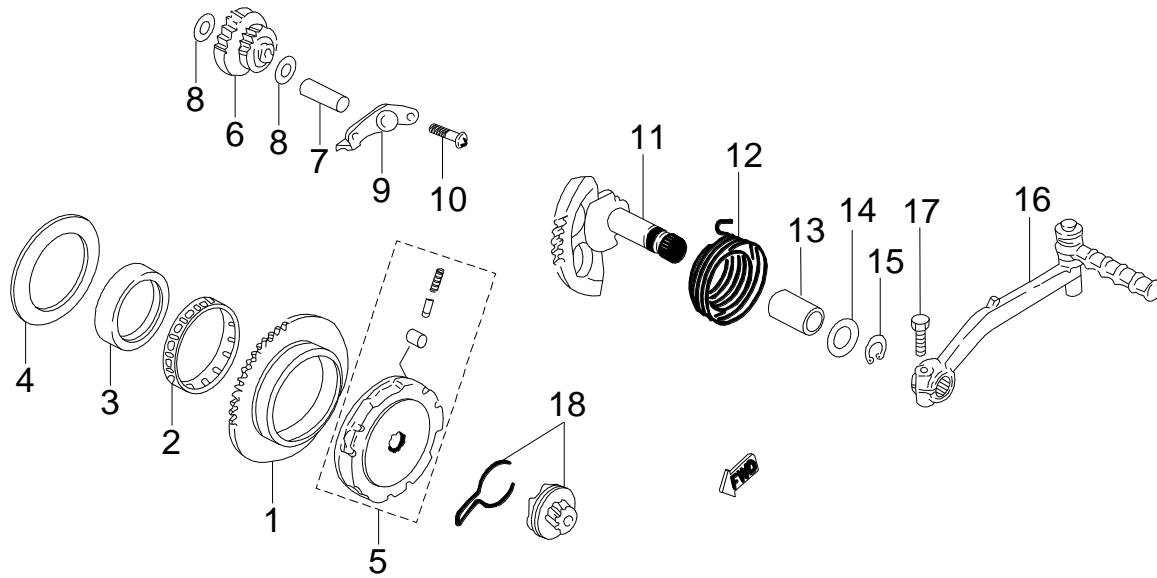

Item	Part No.	Part Name	Q'ty
1	22110-E01-200	Wheel, Starter	1
2	95200-555912	Bearing, Needle	1
3	11213-E01-100	Boss	1
4	93100-55076-05B-1	Washer, Plate	1
5	22100-E03-000	Wheel, Starter	1
6	22120-E01-000	Idle Gear Ass'y	1
7	11344-E01-000	Shaft	1
8	93100-08516-15C-1	Washer, Plate	2
9	22121-E01-000	Plate, Idle Gear	1
10	91760-06010-05W-1	Hex. Socket Bolt	2
11	28211-E01-100	Kick Shaft Ass'y	1
12	28261-E01-200	Spring, Torsion	1
13	28251-E01-000	Bush, Kick Shaft	1
14	93100-15228-10C	Washer, Plate	1
15	93406-STW15A	Circlip	1
16	16105-A01-000	Kick Ass'y	1
17	91700-06025-10C	Hex. Bolt, Flange	1
18	28221-E01-100	Kick Pinion Ass'y	1


E-10
Clutch

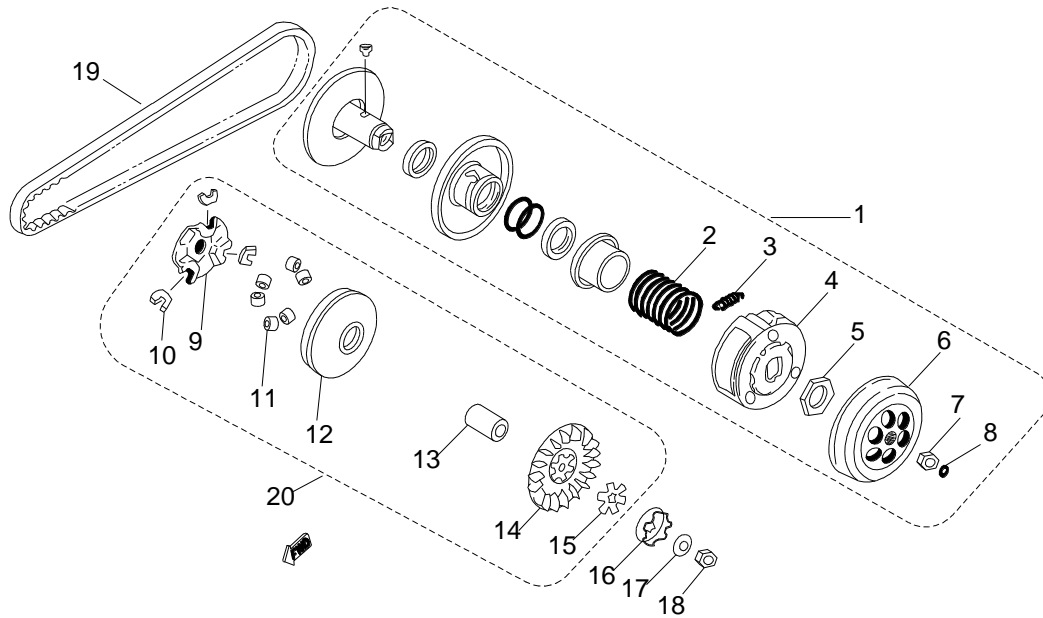

Item	Part No.	Part Name	Q'ty
1	22300-E03-200	Secondary Sheave Ass'y	1
2	22312-E03-000	Spring, Compression	1
3	22331-E03-000	Spring, Clutch	3
4	22330-E03-000	Carrier Ass'y, Clutch	1
5	22332-E01-200	Nut, Clutch	1
6	22340-E03-000	House, Clutch	1
7	92111-10-19G	Hex. Acorn Nut	1
8	96200-125030	O-Ring	1
9	22411-E03-100	Plate, Cam	1
10	22412-E01-000	Slider, Cam Plate	3
11	22413-E01-010	Weight Roller	6
12	22410-E03-100	Sliding Sheave, Primary	1
13	22414-E03-100	Collar	1
14	22420-E03-100	Fixed Sheave, Primary	1
15	22421-E03-200	Waser, Clam	1
16	22422-E03-000	Clutch, Oneway	1
17	93103-10524-26-1	Washer, Conical Spring	1
18	92110-10-17C	Hex. Acorn Nut	1
19	22500-E03-000	Belt, Drive	1
20	22400-E03-200	Sliding Sheave, Ass'y	1

E-11


Transmission

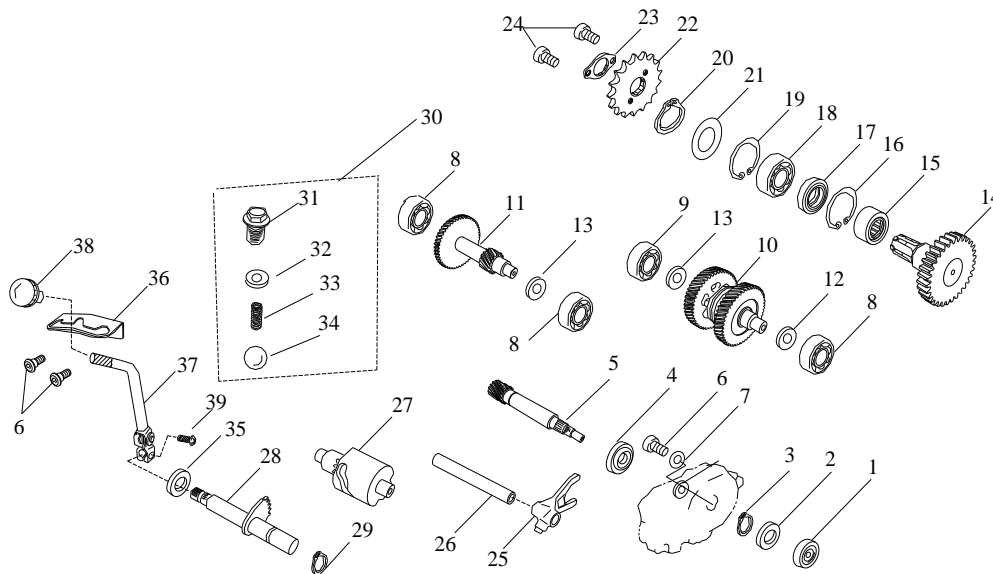

Item	Part No.	Part Name	Q'ty
1	95100-638LLU	Bearing, Ball	1
2	96100-172855	Seal, Oil	1
3	93406-STW17A	Circlip	1
4	95100-T6003	Bearing,Ball	1
5	23610-E01-010	Drive Gear,Primary	1
6	91760-06010-05W-1	Hex. Socket Bolt	3
7	93100-06519-12W-2	Waser, Plate	1
8	95100-T6201	Bearing,Ball	3
9	95100-T6202	Bearing,Ball	1
10	23640-E01-000	Main Axle	1
11	23620-E01-010	Drive Gear,Shift	1
12	93100-15522-10B	Washer , Plate	1
13	93100-12018-10B	Washer , Plate	2
14	23650-E01-000	Gear,Driven	1
15	95200-HMK2515-2	Bearing,Needle	1
16	93405-IRTW32A	Circlip	1
17	96100-253506	Seal, Oil	1
18	95100-6004LLU	Bearing, Ball	1

E-11-1


Transmission

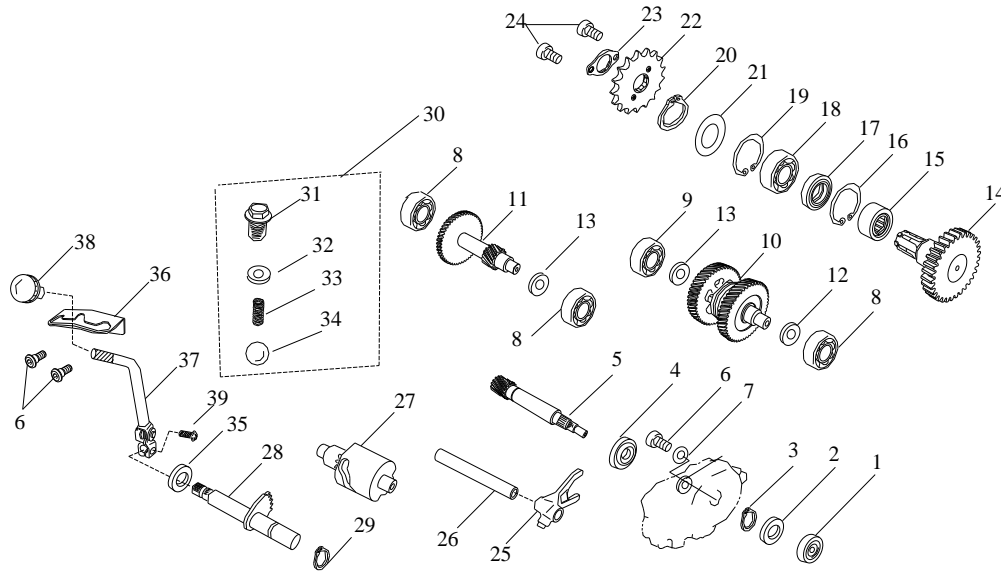

Item	Part No.	Part Name	Q'ty
19	93405-RTW42A	Circlip	1
20	93406-STW19A	Circlip	1
21	93100-20028-10B	Washer,Plate	1
22	23810-E01-000	Sprocket,Prive	1
23	23900-E01-000	Safety Clip	1
24	91700-06012-10G	Hex. Bolt, Flange	2
25	41000-E01-000	Shift ,Fork	1
26	41020-E01-100	Gear Shift Fork Guide Shaft	1
27	41030-E01-000	Gear Shift Drum	1
28	41040-E01-000	Gear Shift Fork Guide Shaft	1
29	93406-STW14A	Circlip	1
30	41050-E01-000	Shift Position Fix Ass'y	1
31	41051-E01-100	Hex	1
32	41054-E01-100	Tlat Washer Aluminium	1
33	41052-E01-100	Spring	1
34	41053-E01-100	Shift Ball	1
35	96100-14287	Seal,Oil	1
36	41060-E01-101	Bracket ,Shift	1
37	41070-E01-000	Shift Stick	1
38	41080-A10-000	Knob, Shift Stick	1
39	91700-06020-10C-1	Hex.Washer Face Bolt	1

E-12


Generator

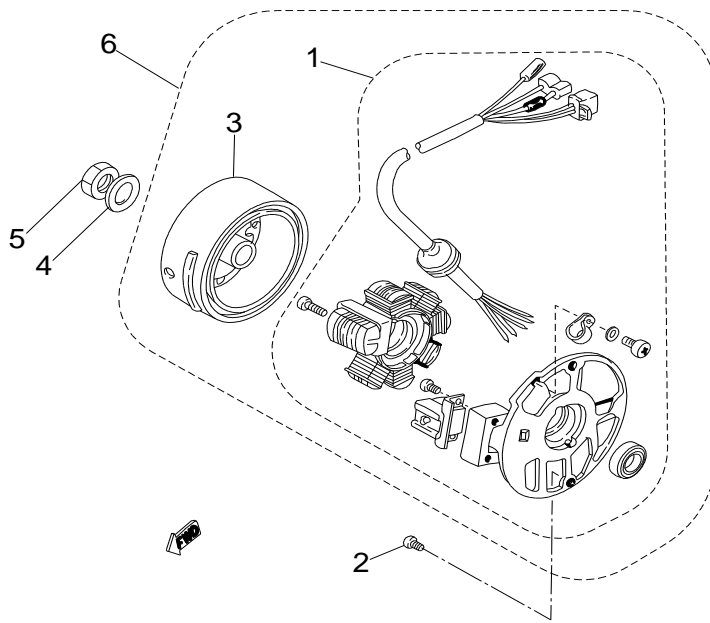

Item	Part No.	Part Name	Q'ty
1	31120-E03-000	Base Ass'y, Generator	1
2	91760-06016-05W-1	Hex. Socket Bolt	2
3	31100-E03-000	Wheel, Fly	1
4	93100-10022-20C-1	Washer, Plate	1
5	92110-10-17C	Hex. Acorn Nut	1
6	31000-E03-000	Generator Ass'y	1

E-13


Start Motor

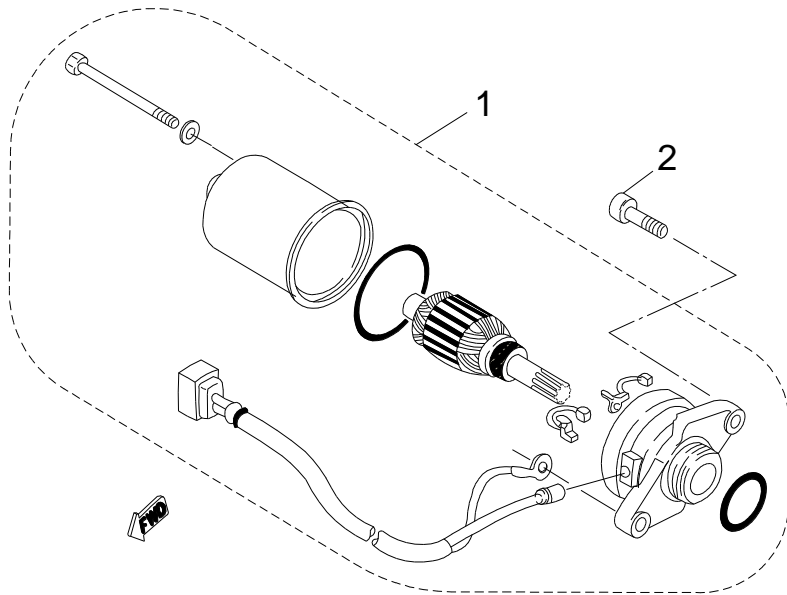

Item	Part No.	Part Name	Q'ty
1	31200-E01-000	Starting Motor Ass'y	1
2	91760-06020-05W-1	Hex. Socket Bolt	2

F-1


Exhaust Pipe

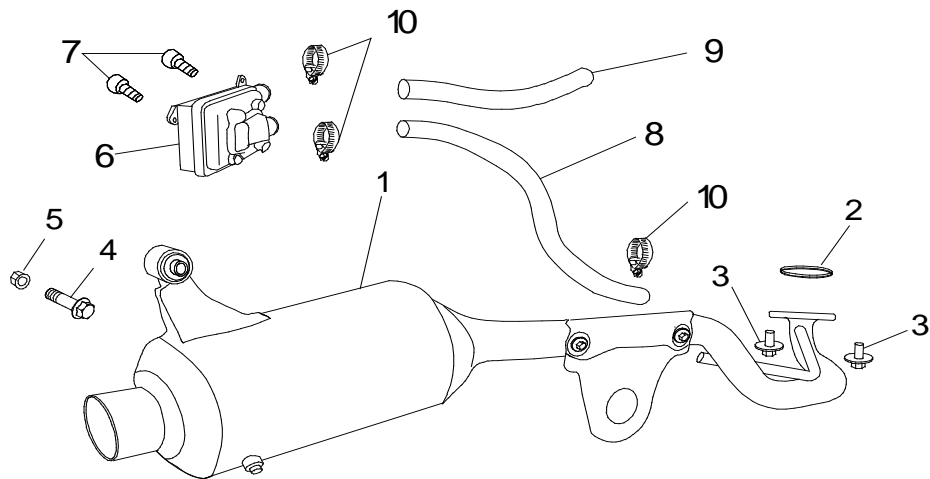

Item	Part No.	Part Name	
1	12160-A01-150	Exhaust Pipe	
2	12161-A01-000	Washer, Muffler	Q'ty
3	91811-A01-000	Bolt, Crosshead, Flange	1
4	91710-10040-14G	Bolt , Flange	1
5	92130-10S-14G	Nut, Insert Lock	2
6	12166-A01-000	Reed Valve Ass'y, Air	1
7	91750-06020-10G-1	Hex. Bolt,Flange, Washer	1
8	12168-A01-110	Hose, Air	1
9	12168-A01-020	Hose, Air	2
10	97412-A01-010	Clip(MinHC-1 7)	1

F-2
Frame


1
3

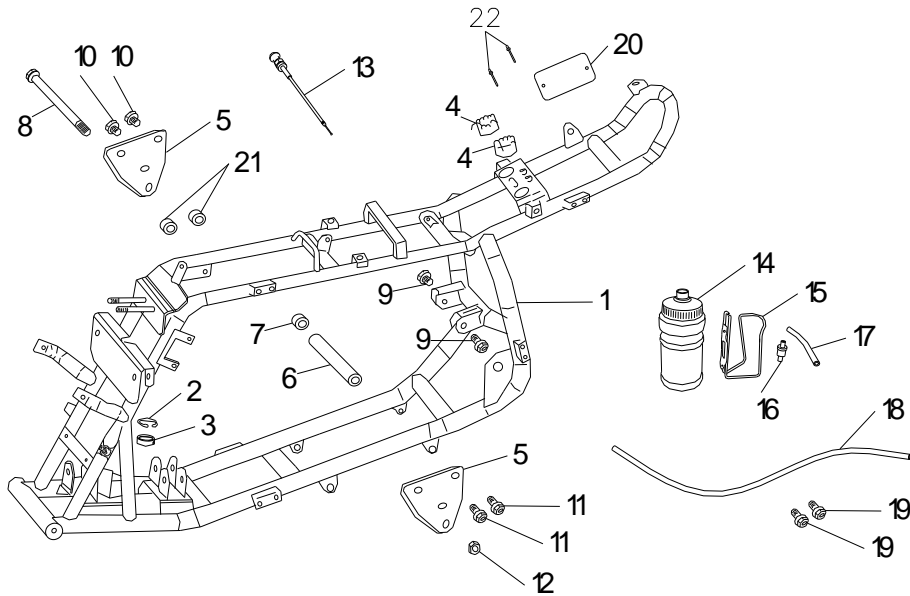

Item	Part No.	Part Name	Q'ty
1	71000-A02-121-SI	Chassis	1
2	93405-IRTW32A	Circlip	1
3	95100-B6002 2RS	Bearing	1
4	93501-A01-000	Coushion, Seat	2
5	71205-A01-000	Engine Holder Seat	2
6	93305-A01-000	Collar (andoised)	1
7	93310-A01-000	Collar(andoised)	1
8	91700-12220-14G	Blot Flange	1
9	91710-08035-12G	Hex Washer Face Bolt	2
10	91700-08020-12G	Hex Washer Face Bolt	2
11	91700-08012-12G	Hex Washer Face Bolt	2
12	92130-12S-17G	Nut, Insert Lock	1
13	31220-A01-000	Cable, Manual Choke	1
14	15105-A01-001	Aux Liquid Bottle	1
15	71310-A01-000	Aux Liquid Bottle Holder	1
16	15106-A01-000	Aux Liquid Bottle Connector	1
17	15108-A01-000	Aux Liquid Bottle Hose (short)	1
18	15107-A02-000	Aux Liquid Bottle Hose(long)	1
19	91760-06012-05G	Hex. Screw, Socket	2
20	71237-E03-000	id ,plate	1
21	93300-08020-07	Spacer	2
22	91835-A01-000	Stud, Warning Plate	2

F-3


Awing Arm , Footrest

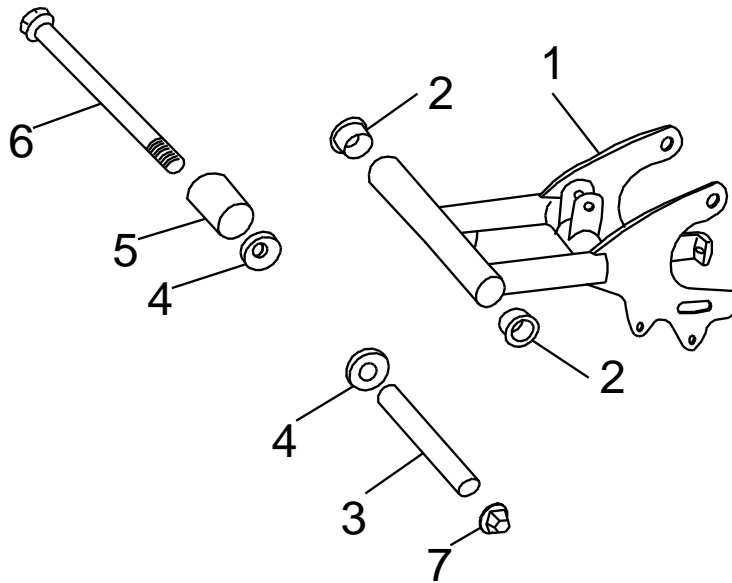

Item	Part No.	Part Name	Q'ty
1	82105-A01-111	Fork, Rear	1
2	95305-A01-000	Bushing Contain Oil	2
3	93315-A01-000	Spacer Tube, Rear-fork	1
4	93609-A01-100	Seal cover,swing Arm	2
5	93500-A01-000	Rubber Sleeve	1
6	91700-14290-19G-1	Bolt, Flange	1
7	92130-14S-19G	Nut, Insert Lock	1

F-4


Bumper · A-Arm

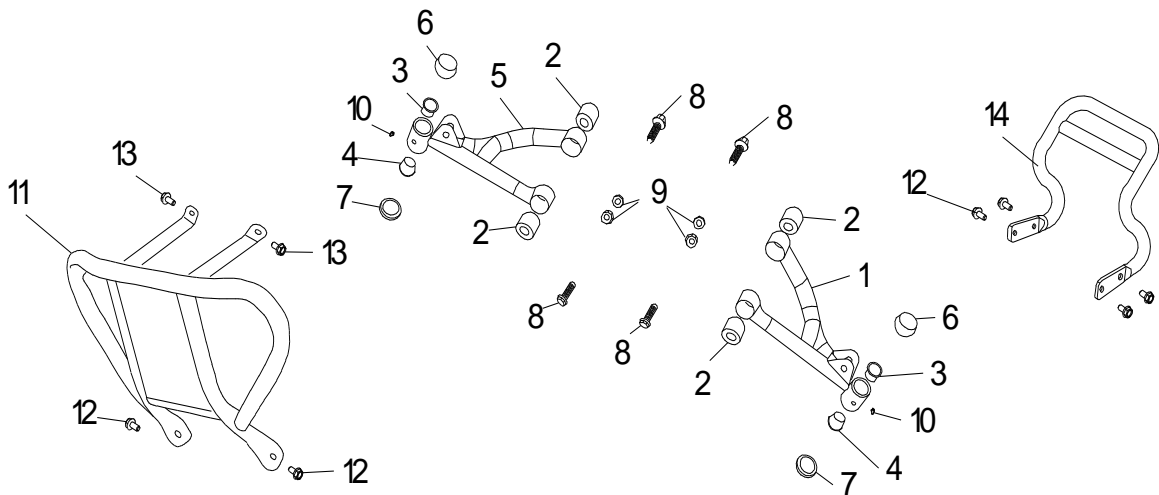

Item	Part No.	Part Name	Q'ty
1	81105-A02-100-SI	A. Arm, Left	1
2	93505-A01-100	Bush	4
3	95310-A01-000	Bush, Contion Oil, Top	2
4	95315-A01-000	Bush, Contion oil, Bottom	2
5	81110-A02-100-SI	A Arm, Right	1
6	93605-A01-000	Waterproof Rubber	2
7	93610-A01-000	Dustproof Rubber	2
8	91700-10048-14G	Bolt, Flange	4
9	92130-10S-14G	Nut, Insert Lock	4
10	91805-A01-000	Grease Valve	2
11	71211-A01-140-SI	Front Bumper	1
12	91700-08012-12G	Hex Waser Face Bolt	6
13	91750-06016-10G	Bolt ,Flange	2
14	71235-A01-120-SI	Rear Hand Grip	1

F-5


Fuel Tank, Oil Tank

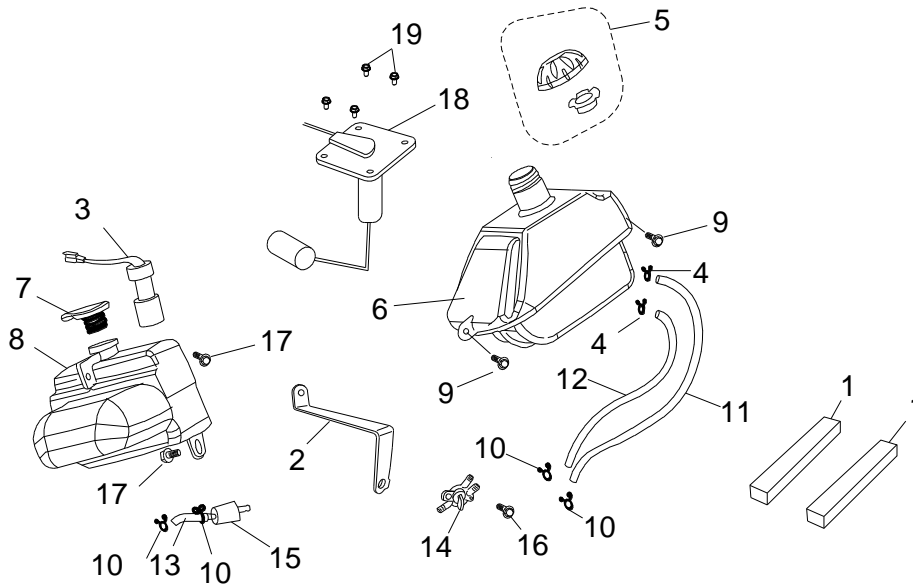

Item	Part No.	Part Name	Q'ty
1	12110-A02-100	Sponage	2
2	12220-A01-001	Bracket, Support	1
3	12210-A01-000	Gauge, Oil Level	1
4	97411-A01-000	Clip	2
5	12150-A01-010	Cap Assembly, Fuel tank	1
6	12100-A01-010	Tank,Fuel	1
7	12205-A01-101	Cap, Oil Tank	1
8	12200-A01-101	Tank, Oil	1
9	91750-06016-10G	Bolt ,Flange	2
10	97410-E01-000	Clip, Tube	4
11	12310-A01-002	Tube A , Fuel	1
12	12311-A01-002	Tube B , Fuel	1
13	12317-A01-111	Tube,Oil	1
14	12105-A01-000	Valve, Fuel	1
15	12215-A01-000	Oil Filter	1
16	91700-06012-10G	Hex. Bolt, Flange	1
17	91821-A01-000	Bolt, Hex Ladder(Short)	2
18	12115-A01-000	Gauge,Fuel Tank	1
19	91710-05010-08B	Bolt, Hex. Washer Plate	4

F-6


Shock Absorber · Lamp

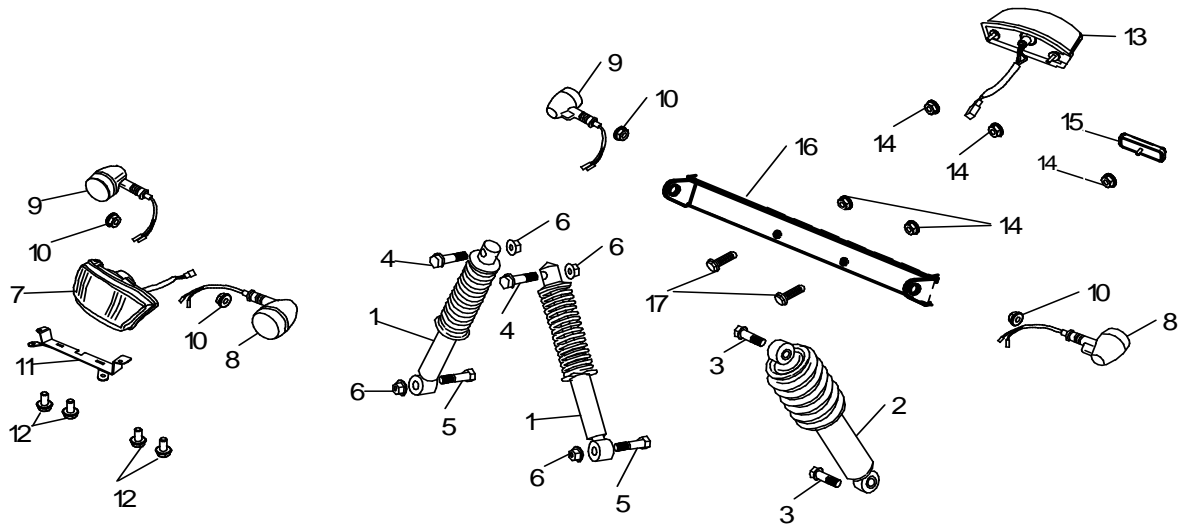

Item	Part No.	Part Name	Q'ty
1	81200-A01-10A	Shock Absorber, Front	2
2	82200-A01-121	Shock Absorber , Rear	1
3	91710-10038-14G	Hex. Bolt, Flange	2
4	91700-10040-14G	Hex. Bolt, Flange	2
5	91770-10038-14G	Hex. Bolt	2
6	92130-10S-14G	Nut, Insert Lock	4
7	62205-A01-010	Head Lamp Comp	1
8	62230-A01-000	Singal Light, L. Rear	2
9	62225-A01-000	Signal Light, R. Rear	2
10	92120-10-14G	Nut,Flange	4
11	62206-A01-000	Head Lamp Bracket	1
12	91825-04012-1	Philips Screw, Tapping	4
13	62210-A01-000	Tail Light Comp	1
14	92130-06S-10G	Nut, Insert Lock	5
15	62240-A01-000	Reflector, Rear	1
16	83117-A01-000	Clip, Signal Light	1
17	91700-06016-10G	Hex. Bolt, Flange	2

F-7


Front Tire

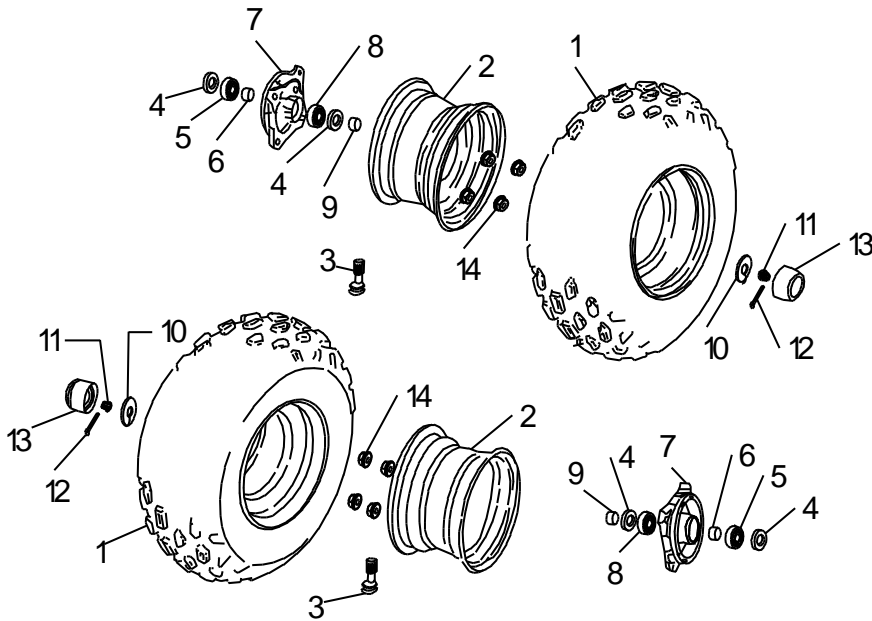

Item	Part No.	Part Name	Q'ty
1	24105-A02-000	Tire(KENDA K546F) 19X7-8	2
2	24205-A01-000	Rim 8x5.5	2
3	24106-A01-000	Valve, Tire	2
4	96100-223507A	Seal, Oil	4
5	95100-B6003 2RS	Bearing	2
6	93325-A01-200	Spacer, Inner	2
7	31105-A01-001	Drum Brake, Front	2
8	95100-B6002 2RS	Bearing	2
9	93320-A01-100	Spacer, Outer	2
10	93100-12540-45G	Washer, Plate	2
11	92140-12-17G	Nut, Insert Lock	2
12	94000-03032	Cotter pin	2
13	93615-A01-000	Cap, Rubber	2
14	92130-10S-14G	Nut, Insert Lock	8

F-8


Rear Tire

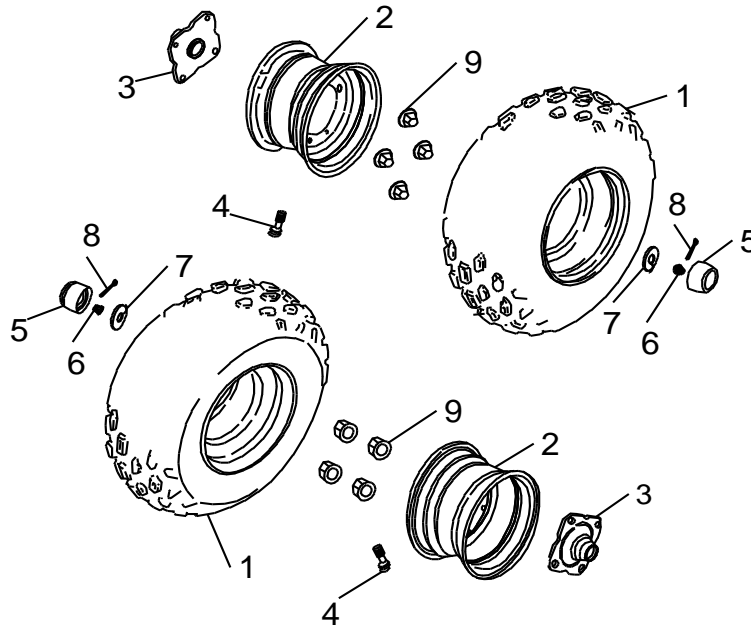

Item	Part No.	Part Name	Q'ty
1	24105-A02-010	Tire(KENDA K546F) 18x9.5-8	2
2	24206-A01-000	Rim 8x7	2
3	23105-A01-010	Fixed bracket , Rim , Rear	2
4	24106-A01-000	Valve, Tire	2
5	93615-A01-000	Cap, Rubber	2
6	92140-14-19G	Nut, Insert Lock	2
7	93100-14540-45G	Washer, Plate	2
8	94000-03032	Cotter pin	2
9	92130-10S-14G	Nut, Insert Lock	8

F-9


Drum Brake,Front

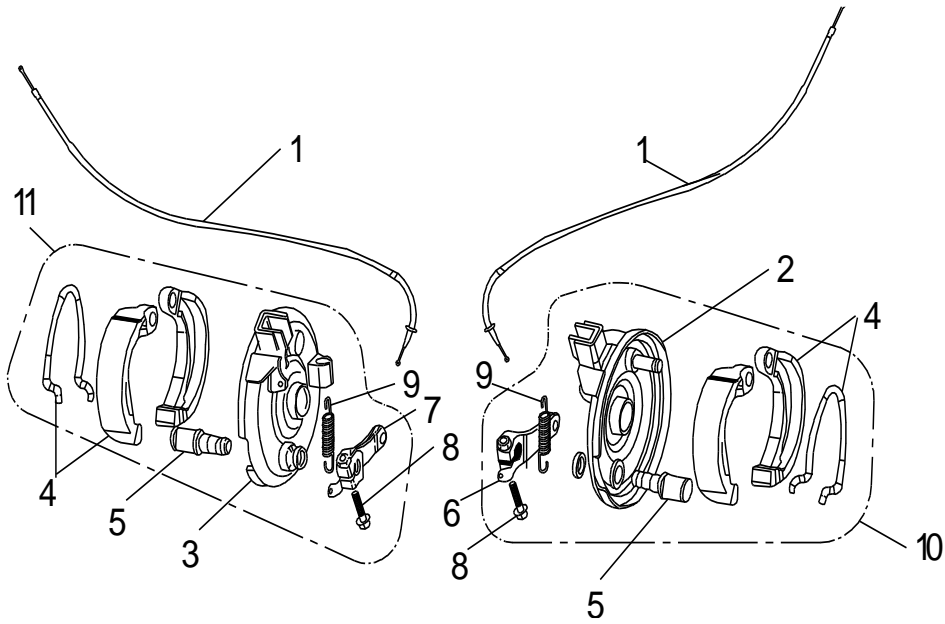

Item	Part No.	Part Name	Q'ty
1	31205-A02-002	Cable , Front Brake	2
2	31306-A01-00A	Panel Comp , Front L,Brak	1
3	31311-A01-00A	Panel Comp , Front R,Brak	1
4	31315-A01-001	Shoe, Front Drum Brake	2
5	31320-A01-000	Cam Shaft, Front Brake	2
6	31325-A01-010	Arm, Front L. Brake	1
7	31330-A01-010	Arm, Front R. Brake	1
8	91700-05024-08C	Bolt, Hex. Washer Plate	2
9	97205-A01-000	Return Spring, Front Brake	2
10	31305-A01-011	Panel Comp Ass'y , Front L. Br	1
11	31310-A01-011	Panel Comp Ass'y , Front R. Br	1

F-10


Disc Brake System

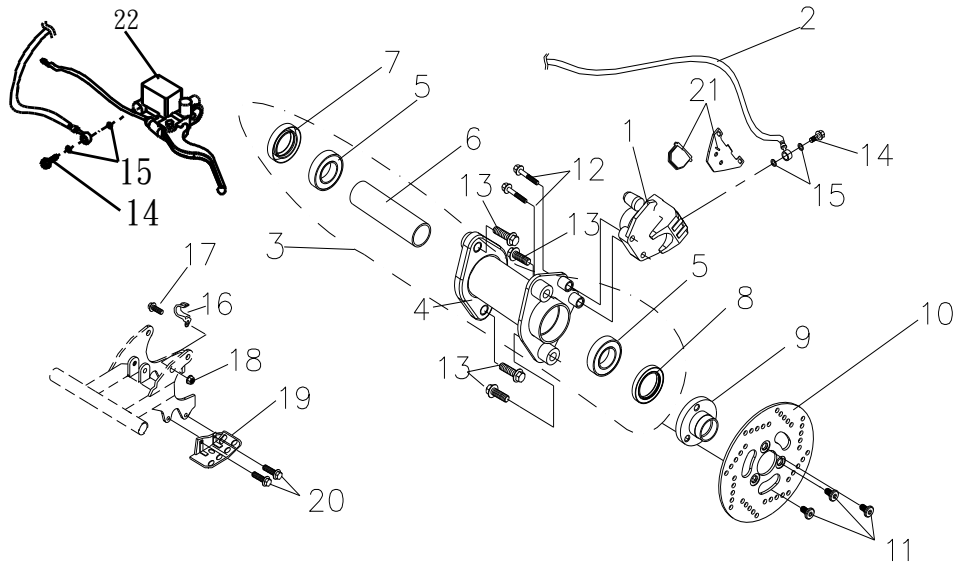

Item	Part No.	Part Name	Q'ty
1	31115-A01-000	Rear Disc Caliper	1
2	31225-A02-000	Hose, Rear Disk Brake	1
3	31300-A02-000	Rear Axle Bearing Carrier	1
4	23215-A01-000	Rear Holder Disk	1
5	95100-T6006ZZ	Bearing	2
6	93330-A01-00A	Spacer	1
7	96100-355511A	Oil Seal	1
8	96100-405507	Oil Seal	1
9	31355-A01-020	Holder Disk	1
10	31120-A01-000	Rear Brake Disc	1
11	91760-10014-08G	Hex Socket Bolt	3
12	91710-08038-12G	Hex Washer Face Bolt	2
13	91710-12028-17G	Hex Washer Face Bolt	4
14	91830-A01-000	Nut, Brake Hose	2
15	93101-A01-000	Washer, Copper	4
16	83115-A01-000	Clip, Brake Hose	1
17	91700-06016-10G	Hex Washer Face Bolt	1
18	92130-06S-10G	Nut, Insert Lock	1
19	71220-A01-100	Rear Brake Guard	1
20	91700-08012-12G	Hex Waser Face Bolt	2
21	31116-A01-000	Brake Pad , Disk Brake	1
22	31405-A01-000	Lever Ass'y,Left	1

F-11


Handle bar, Lever

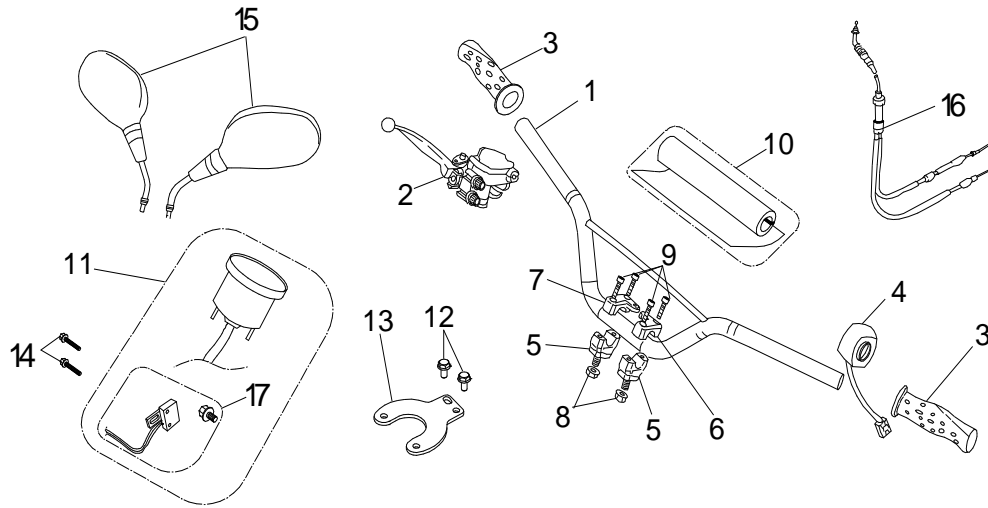

Item	Part No.	Part Name	Q'ty
1	51100-A01-050-BK	Handlebar	1
2	31450-A01-011	Lever Ass'y, Right	1
3	51105-A01-000	Grip, Handle(L)	2
4	61101-A01-0A0	Handle Switch Ass'y, L.	1
5	52105-A01-000	Bottom Clamp, Handlebar	2
6	52110-A01-000	Top Clamp, L. Handlebar	1
7	52115-A01-000	Top Clamp, R. Handlebar	1
8	92130-10S-14G	Nut, Insert Lock	2
9	91760-06025-05G-1	Screw, Hex. Socket	4
10	51110-A01-010	Pad, Handlebar	1
11	63300-A01-010	Speedometer	1
12	91760-06012-05G	Hex. Screw, Socket	2
13	83120-A01-110	Bracket Speedometer	1
14	91740-03008W	Bolt, Pan Phillips	2
15	51115-A01-001	Rear Mirror(pair)	1
18	31215-A02-000	Cable, Throttle	1
19	63300-A01-011	Sensor, Speedometer	1

F-12


Rear Axle, Sprocket

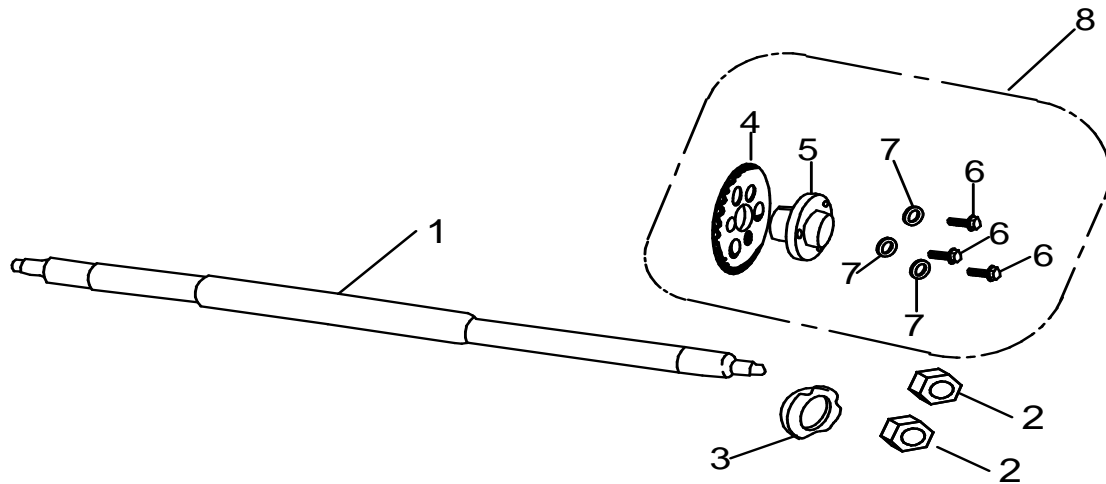

Item	Part No.	Part Name	Q'ty
1	23205-A01-031	Wheel Axle,Rear	1
2	92110-28-36B	Hex. Acorm Nut	2
3	93110-30038-10-1	Washer,Wave	1
4	23305-A01-01B	Sprocket	1
5	23310-A01-000	Sprocket Holder, Driven	1
6	91810-A01-000	Bolt, Hex. Washer Plate	3
7	93103-A01-000	Spring Washer	3
8	23300-A01-01B	Sprocket Ass'y(rear,428-28T)	1

F-13


Chain, Guard

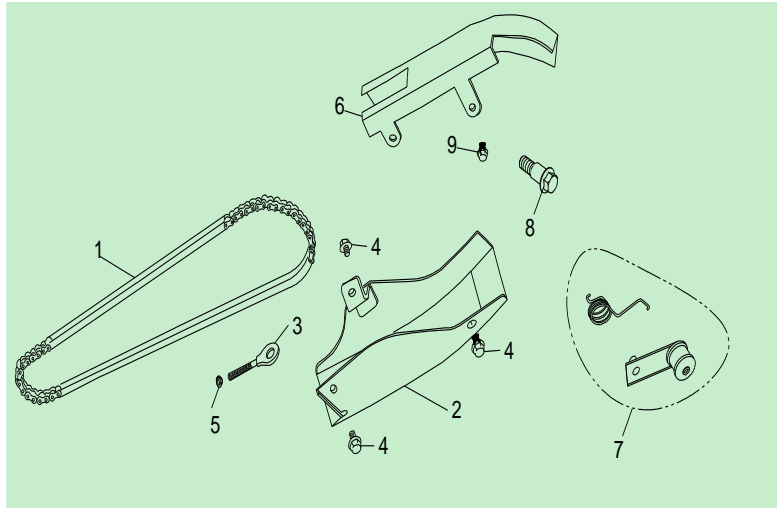

Item	Part No.	Part Name	Q'ty
1	23315-NP428H-082	Chain	1
2	71225-A01-000	Guard, Bottom, Chain	1
3	23321-A01-010	Adjuster, Chain	1
4	91700-08012-12G	Hex Waser Face Bolt	3
5	92130-08S-14G	Nut, Insert Lock	1
6	71230-A01-300	Guard, Top, Chain	1
7	23320-A01-002	Bracket, Chain	1
8	91823-A01-000	Hex Washer Ladder Bolt	1
9	91700-06012-10G	Hex Waser Face Bolt	2

F-14


Steering, Shaft, Link

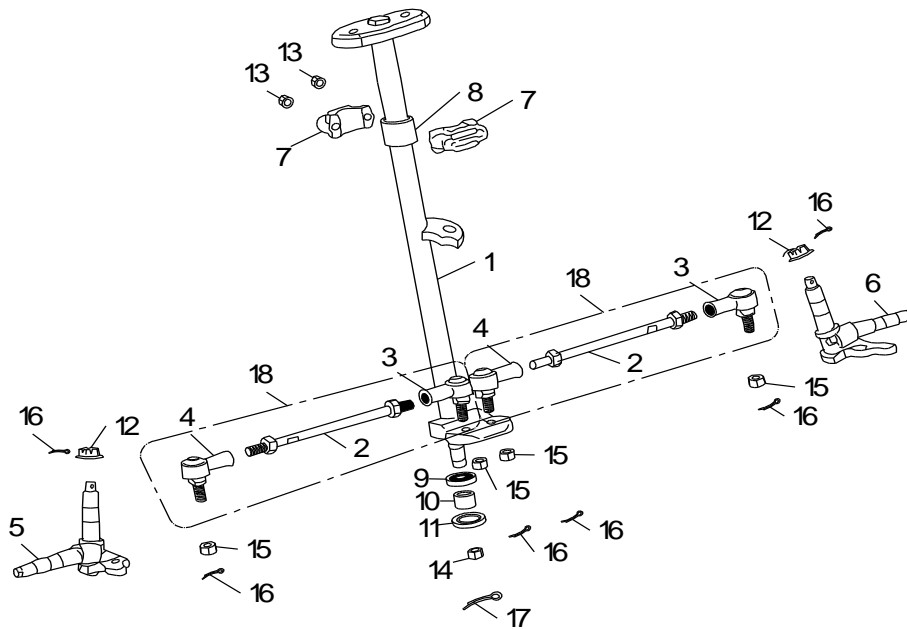

Item	Part No.	Part Name	Q'ty
1	52205-A02-100	Steering Shaft Assembly	1
2	52305-A01-100	Pull Rod	2
3	52310-A01-100	Ball Joint, Left Thread	1
4	52315-A01-100	Ball Joint, Right Thread	1
5	52320-A01-000	Knuckle, L.	1
6	52325-A01-000	Knuckle, R.	1
7	52120-A01-000	Shaft Holder, Steering	2
8	93510-A01-000	Bush, PU	1
9	96100-183207A	Seal, Oil	1
10	93325-A01-200	Spacer, Inner	1
11	96100-223507A	Seal, Oil	1
12	92141-10-14G	Cross Thread Nut	2
13	92130-08S-14G	Nut, Insert Lock	2
14	92130-14S-19G	Nut, Insert Lock	1
15	92130-10S-14G	Nut, Insert Lock	4
16	94000-01620	Cotter pin	6
17	94000-03032	Cotter pin	1
18	52300-A02-100	Link Ass'y	2

F-15


Electronics

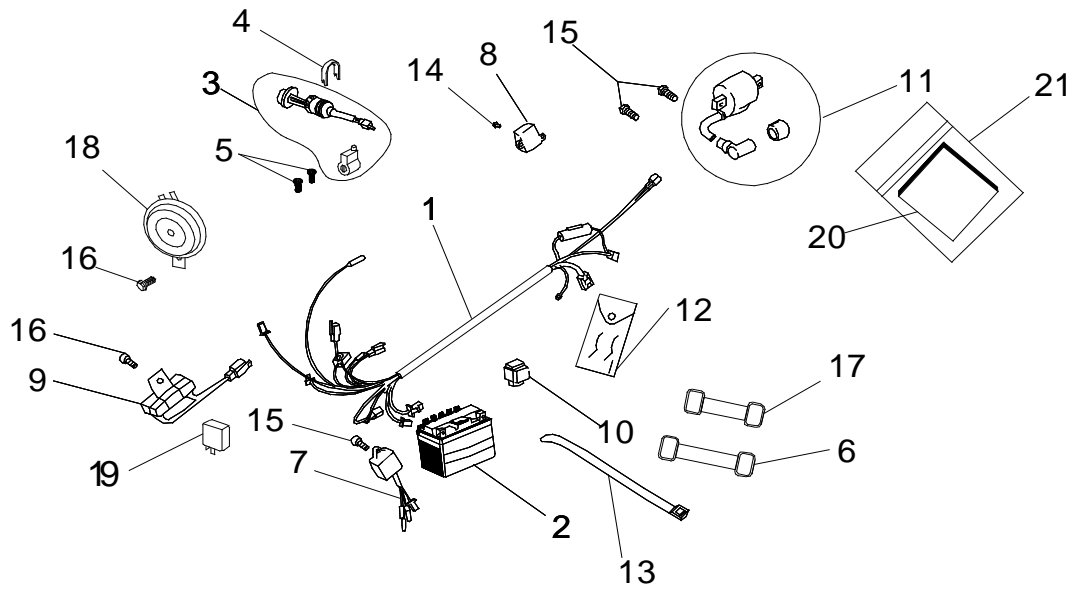

Item	Part No.	Part Name	Q'ty
1	63100-A01-143	Main Wire Ass'y	1
2	63205-A01-00A	Battery	1
3	61106-A01-001	Main Switch(with Handle Lock)	1
4	61107-A01-000	Clip, Main Switch	1
5	91732-06015G	Bolt	2
6	83110-A01-000	Rubber Band,Tool Bag	1
7	61115-A01-000	C.D.I Unit	1
8	61120-A01-000	Rectifier & Regulator	1
9	61125-A01-100	Resistor	1
10	61130-A01-100	Starter Relay	1
11	61109-A01-001	Ignition Coil	1
12	72105-A01-001	Tool Bag	1
13	93705-A01-100	Strap	12
14	91740-05012G	Bolt, Pan Phillips	2
15	91700-06016-10G	Hex Washer Face Bolt	3
16	91700-06012-10G	Hex. Bolt, Flange	2
17	83105-A01-010	Rubber Band, Battery	1
18	61145-A01-100	Horn	1
19	61150-A01-000	Blink Relay	1
20	72117-A01-010	Owner manual	1
21	97810-A01-000		1


F-16

Seat, Fender

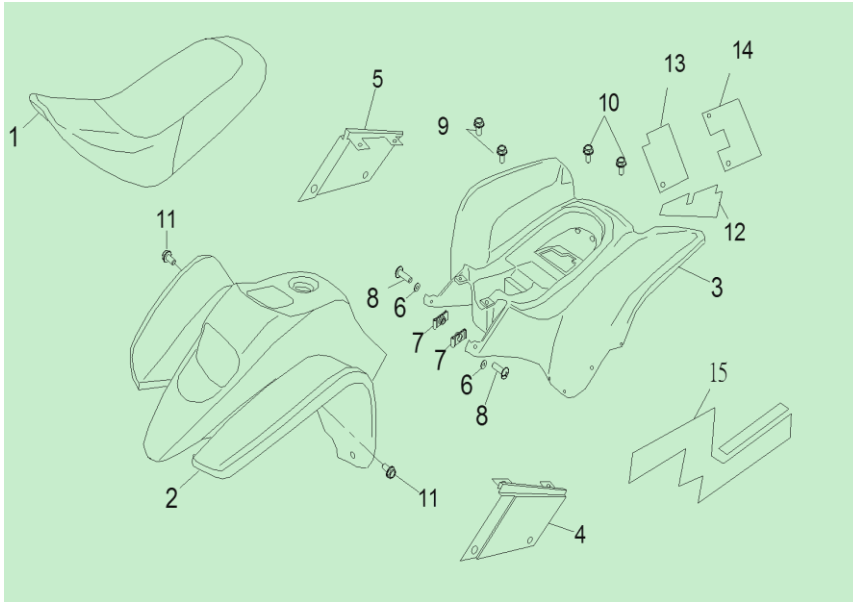

Item	Part No.	Part Name	Q'ty
1	71305-A02-000	Seat	1
2	72205-A01-100-RE	Fender, Front(Red)	1
3	72210-A01-100-RE	Fender, Rear (Red)	1
4	72230-A02-100-RE	Side Panel, Left	1
5	72225-A02-100-RE	Side Panel, Right	1
6	93104-06014-08	Washer, Nylon	4
7	92210-A01-100	U Plate Nut	4
8	91731-06015S-1	Hex Socket Bolt	4
9	91820-A01-000	Bolt, Hex Ladder(Long)	2
10	91821-A01-000	Bolt, Hex Ladder(Short)	4
11	91750-06016-10G	Bolt ,Flange	2
12	72120-A01-000	Heat Cushion(Side)	1
13	72125-A01-000	Heat Cushion(Front)	1
14	72130-A01-000	Heat Cushion(Rear)	1
15	72115-A01-0GO-1	Sticker(PATRIOT)	1

F-17
Nerfbar

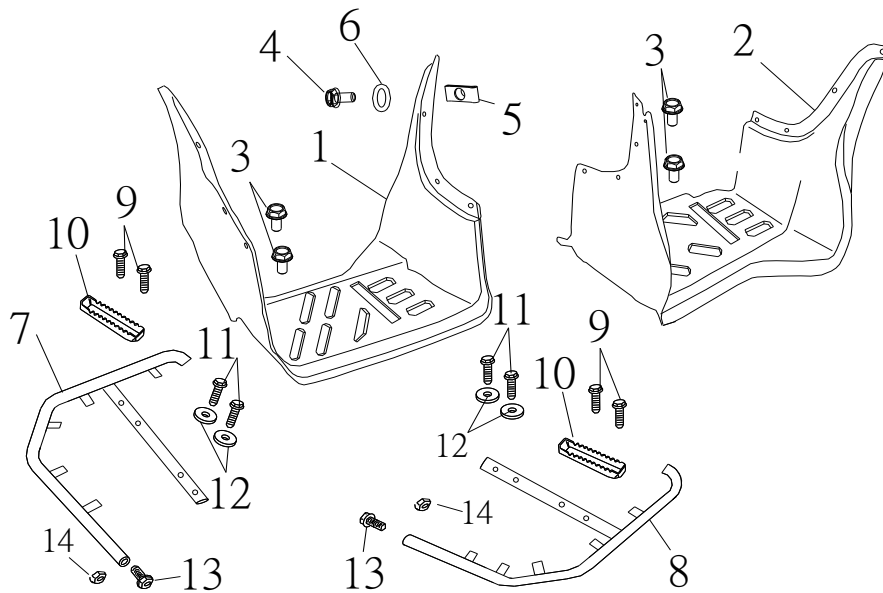

Item	Part No.	Part Name	Q'ty
1	72215-A02-100	R. Footrest	1
2	72220-A02-100	L. Footrest	1
3	91750-06016-10G	Bolt ,Flange	8
4	91825-A01-00A	Screw, Tapping	16
5	92215-A01-000	U Plate Nut	16
6	93104-06014-08	Washer, Nylon	16
7	72305-A02-130		1
8	72310-A02-130		1
9	91700-06016-10G	Hex Washer Face Bolt	4
10	72300-A02-000		2
11	91700-08020-12G	Hex Washer Face Bolt	4
12	93100-10032-30G-1	Washer, Plate	4
13	91710-08028-12G-1	Hex Waser Face Bolt	2
14	92130-08S-14G	Nut, Insert Lock	2